


ATAC BOILAR

CONTINUOUS BOILING POINT ANALYSER

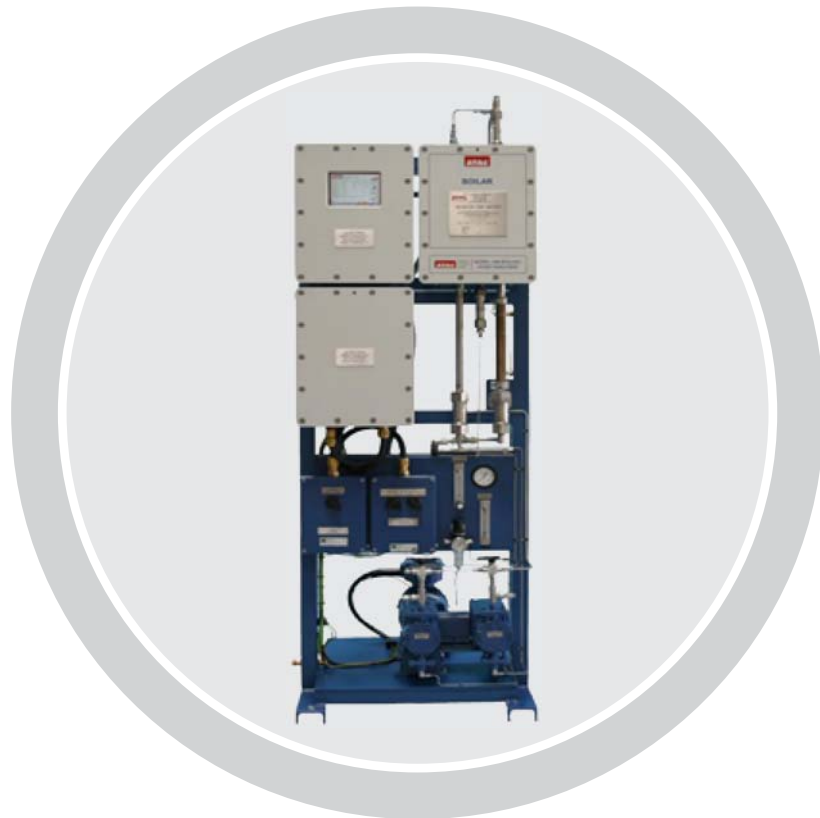

The ATAC Boilar continuously measures the percent recovered temperatures of petroleum products from 5% to 95% within the distillation temperature range 50°C to 400°C. The Boilar provides fast, continuous, reliable data and is simple to operate and easy to maintain.



- Fast, continuous boiling point analysis
- Correlates to ASTM D86 and ISO 3405-IP123 test methods
- Exceeds test method repeatability
- Accurate, reliable ultrasonic level detection
- Auto Calibration & Validation
- Local colour LCD display

TYPICAL APPLICATIONS

The ATAC Boilar is ideal for increasing yields, improving blending operations and controlling distillation columns to tight specifications in:

- Crude distillation units
- Blenders
- Towers
- Visbreakers
- Reformers

PRINCIPLE OF OPERATION

The Boilar analyser schematic is shown in Figure 1. The sample is metered into a vaporiser assembly at a constant flowrate. It then flows down a heater assembly maintained at a temperature dependent on the percentage of sample to be boiled off and the remaining sample is collected in a measuring device. Boilar uses a two-term heater to provide precise temperature control and prolong heater life; it is also fitted with an ultrasonic level sensor for accurate, reliable data. The sample is then discharged at a rate proportional to the sample input rate.

The temperature of the vaporiser at equilibrium is the percent recovered boiling point. This temperature is measured and transmitted.

For example, if the 40% boiling point is required, the discharge rate is 60% of the input rate. If the vaporiser temperature is higher than the percent distillation temperature, more than 40% is evaporated and the level in the measuring device falls.

This causes an automatic reduction of vaporiser temperature until equilibrium between input and discharge is reached. The sample metering arrangements are infinitely variable between 5% and 95% and the percent-recovered boiling point can range from 50°C to 400°C.

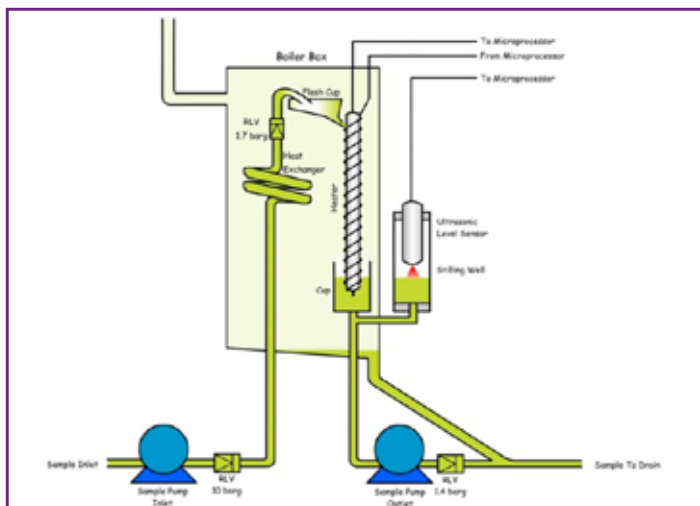


Figure 1: Boilar schematic



Figure 2: Boiler LCD display

SPECIFICATIONS

Type of analyser	Continuous Single Point Distillation
Application	Boiling Point Calculated Cetane Index (optional, requires density input)
Analyser range	Temperature 50-400°C for 5%-95% distilled
Output scale	Minimum span 50°C within the above range
Repeatability	Better than ASTM / ISO test methods
Certification	ATEX certified to EN60079-0, 60079-1, 60079-7 and 60079-11 II 2G EEx d IIB T4 (IIB + H ₂ option available) EMC EN1326 LDV EN6101-1
Response time	Approximately 2 minutes
Local display	Colour LCD Display
Communications	4-20mA, RS232
Power supply	100 to 120 or 200 to 240Vac ± 10% 50/60Hz 1200VA maximum
Relays	NC contacts, each rated at 0.5A, for Fatal Alarm, Warning Alarm, Data Valid, Heater/Pump, Cal/Val in progress and External Alarms
Ambient temperature	5°-55°C A weatherproof shelter with good illumination is strongly recommended. In cold climates, background heating may be necessary to avoid plugging of sample lines by heavier products.
Sample temperature	65°C maximum (must be at least 20°C below the initial boiling point)
Sample pressure	1 barg minimum, 7 barg maximum. Sample drain must be to atmospheric pressure.
Dimensions	700mm (w) x 700mm (d) x 1800mm (h)
Utilities	Coolant - clean water at 0.5 litre/min is required at 25°C maximum and inlet pressure of 5 barg maximum, depending on application. On more volatile products, cooling water between 5°C and 10°C will be required. Air - plant instrument air is required at 3 barg, 0.5 litre/min for high temperature analyser (diesel or heavy gas oil applications) measuring temperatures above 300°C. Nitrogen - plant or bottle at 150-250 ml/min; 95% pure (optional).
Connections	Water: ¼" OD (inlet & outlet) Sample: ⅛" OD Nitrogen: ⅛" OD Auto Cal/Validate: ¼" OD Stream switching: two ¼" OD Electrical: 1 x M20 * 1.5mm (power in), 2 x M20 * 1.5mm (signals & alarms)



ANAEL - Analyse en ligne

ZI - 15 rue Nobel
45700 VILLEMANDEUR - FRANCE

Tel : +33 2 38 85 77 12
info@analyse-en-ligne.com

Fax : +33 2 38 85 99 65
www.analyse-en-ligne.com